

User Manual

diskashur®



Copyright © iStorage, Inc 2012. All rights reserved.

Windows is a registered trademark of Microsoft Corporation.

All other trademarks and copyrights referred to are the property of their respective owners.

Distribution of modified versions of this document is prohibited without the explicit permission of the copyright holder.

Distribution of the work or derivative work in any standard (paper) book form for commercial purposes is prohibited unless prior permission is obtained from the copyright holder.

DOCUMENTATION IS PROVIDED AS IS AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID



FC **CE** **RoHS**

All trademarks and brand names are the property of their respective owners.



Table of Contents

Introduction.....	4
Box contents.....	4
1. diskAshur Layout	5
2. Connecting the diskAshur	6
3. Connecting the diskAshur with USB Y-Cable	7
4. How do I use the diskAshur the first time?	7
5. What if I forget the User PIN?	7
6. Entering the Standby Mode	8
7. Entering the User Mode	8
8. Exiting the User Mode	8
9. Entering the Admin Mode	9
10. Exiting the Admin Mode.....	9
11. Changing the Admin PIN	10
12. Adding a new User PIN	11
13. Deleting the User PINs	11
14. Changing the User PIN	11
15. Setting the Unattended Auto Lock Feature.....	12
16. Brute Force Protection	13
17. Setting a Self Destruct PIN	14
18. Completely resetting the diskAshur	15
19. Initializing and formatting the diskAshur after a complete reset.....	15
20. Hibernating, Suspending, or Logging off	17
21. Troubleshooting	18
22. Technical Support	22
23. Warranty and RMA information	22



Introduction

Looking for an effortless way to secure your data?


The iStorage diskAshur Secure Drive is the ultimate portable hard drive and secure storage system. With an easy-to-use keypad design and software free setup, the diskAshur enables you to securely access the drive with your own unique PIN. Featuring your choice of 128-bit or 256-bit hardware encryption and a super-fast USB 3.0 connection, the diskAshur provides seamless real-time encryption, keeping your data safe even if the hard drive is removed from its enclosure.


Box Contents



- iStorage diskAshur drive with integrated USB cable
- Travel Pouch
- USB Y-cable
- Quick Start Guide


1. diskAshur Layout

- 1** Cancel button
- 2**  button
- 3** LED Indicator lights

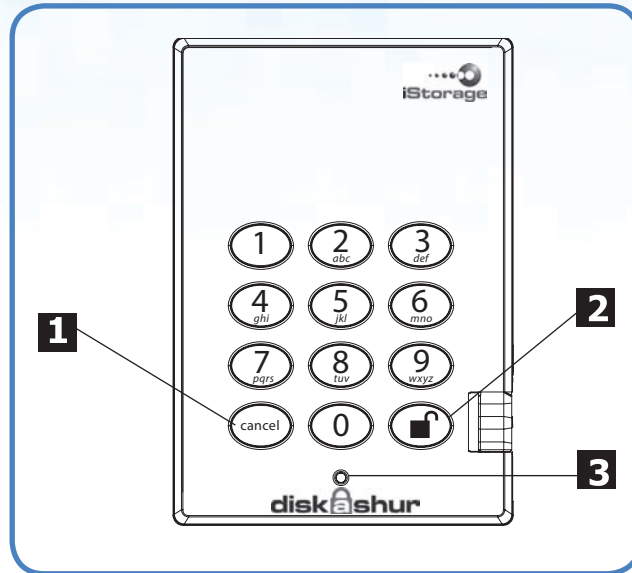




The “**Cancel**” button can be used to:

- Cancel current operation
- Return to the previous step when you knowingly entered a wrong PIN
- Exit the Admin Mode

The  button can be used to access the diskAshur and it can also be used as an OK acknowledgement in the following operations:

- Entering a PIN
- Confirming a new PIN

The LED indicator light displays the following colors to indicate the various modes of operation:

- **RED**: Standby Mode 
- **BLUE**: Admin Mode 
- **GREEN**: User Mode 

The LED indicator light has other display methods to indicate different status of the diskAshur. Details are provided later in this chapter.


Be sure to review the following information before you begin to use the diskAshur.



Caution: Use only the included cables with your diskAshur. You might damage the drive if you use a cable not included with the diskAshur.

2. Connecting the diskAshur

1. Attach the integrated USB cable of the diskAshur drive to an available USB port on your computer, as shown below.
2. The diskAshur LED indicator light should glow **RED**.

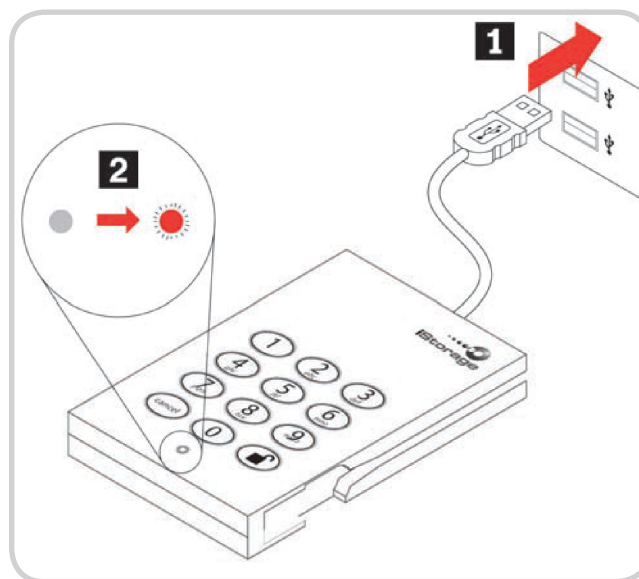


Note: If the LED indicator light does not power, use the included USB Y-cable. Refer to directions on the following page.

3. Connecting the diskAshur with USB Y-cable

If the LED indicator light does not power on a single USB connection, use the included USB Y-cable.

1. Attach the diskAshur's integrated USB cable to the female connector of the USB Y-cable.
2. Connect the two male USB connectors to two available USB ports on your computer.
3. The diskAshur LED indicator light should glow **RED**.

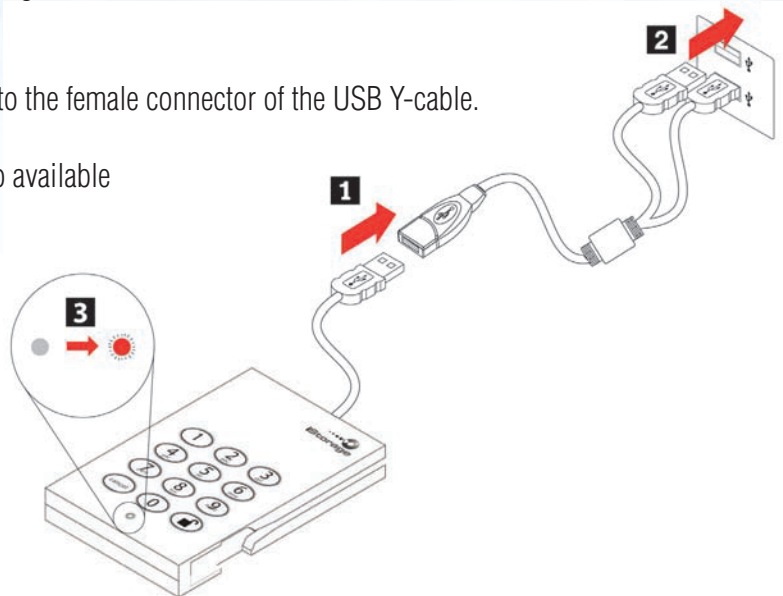

4. How do I use the diskAshur the first time?

You can use it in one of the following ways:

- Enter the Admin Mode with **123456** (default administrator PIN), and then you are able to change the Admin PIN or create a User PIN.
- Directly enter the Secure User Mode with **123456** (default Admin PIN) to use the diskAshur.

5. What if I forget the User PIN?

Use your Admin PIN to enter Admin Mode, and then create another User PIN in Admin Mode.



Caution: If you forget or lose your ADMIN PIN there is no way to access the drive. Even an iStorage employee will be unable to help you access your data. In the event that this happens, the only way to use the drive is to do a complete reset, which will reset the encryption key making all data on the drive unrecoverable and restore the diskAshur to the default Admin PIN **123456**.

See the Chapter “Completely resetting the diskAshur” for instructions.

6. Entering the Standby Mode

The Standby Mode is the default mode of the diskAshur and is the gateway to other working modes.


To enter the Standby Mode, attach the diskAshur to your computer. The drive automatically goes into Standby Mode and the LED indicator light turns **RED**. In this mode, the diskAshur is locked. It cannot be recognized by **My Computer** and it does not provide either the regular functions or the encryption function. However, it enables you to enter and switch between the Admin Mode and the User Mode.



Attention: To switch between the Admin Mode and the User Mode, you are required to switch to the Standby Mode first, and then you can enter the mode of your choice.

7. Entering the User Mode

To enter the User Mode, do the following:

1. Attach the diskAshur to your computer. It enters the Standby Mode.
2. Enter the User PIN or the Admin PIN (the default Admin PIN is **123456**) and press . The LED indicator light turns **GREEN** indicating that the drive is in the User Mode. If the LED indicator light flashes **RED**, you need to re-enter the correct PIN.

8. Exiting the User Mode

To exit the User Mode, press the **“Cancel”** button on the diskAshur keypad. If there is no activity for 5 seconds the drive will lock and go into Standby mode.

Alternatively, you can exit the User Mode by double-clicking the **Safely Remove Hardware** icon from the the Microsoft® Windows® desktop, and then remove the diskAshur from your computer.



Attach the diskAshur to your computer again and the LED indicator light turns RED. This indicates that you are in the Standby Mode.

9. Entering the Admin Mode



Note: The diskAshur cannot be recognized by the operating system in the Admin Mode.

To enter the Admin Mode, do the following:

1. Attach the USB cable to an available USB port on your computer. The diskAshur goes into the Standby Mode, and the LED indicator light turns **RED**.
2. Press and hold  + 0 for five seconds until the LED indicator light flashes **RED**. This indicates that you can enter the Admin PIN.
3. Enter the Admin PIN and press . The default Admin PIN is **123456**. The Secure Hard Drive is in Admin Mode when the LED indicator light has changed to **BLUE**.



Note: If the LED indicator light flashes **RED** for a few seconds, indicating the diskAshur has returned to the Standby Mode, go back to Step 2. This is due to one of the following conditions:




- You entered an incorrect Admin PIN in Step 3.
- No activity was detected within two minutes in the Admin Mode.

10. Exiting the Admin Mode

To exit the Admin Mode, press the **“Cancel”** button in the Admin Mode until the LED indicator light turns **RED**. This indicates that you are in the Standby Mode.

11. Changing the Admin PIN

You can change the Admin PIN by doing the following:

1. Enter Admin Mode (refer to page 9 for details).
2. Press and hold  + 9 until the LED indicator light flashes **BLUE**.
3. Enter the new PIN and press  (The PIN must be a minimum of 6 digits and a maximum of 16 digits). The LED indicator light flashes **GREEN** three times. See note below if **RED** LED indicator flashes three times.
4. Re-enter the new Admin PIN and press . The LED indicator light stays solid **GREEN** for two seconds and then solid **BLUE** indicating that the Admin PIN has been changed successfully.






Note: If the LED indicator light flashes **RED** three times, this indicates that the PIN is less than 6 digits or more than 16 digits. Enter a PIN that contains 6 – 16 digits after the LED indicator light flashes **BLUE** intermittently.

1. If the LED indicator light flashes **RED** intermittently and then **BLUE** intermittently, go back to step 3. This is due to one of the following conditions:
 - You waited longer than 10 seconds before entering a PIN.
 - The new PIN was entered incorrectly.
2. If no activity is detected within two minutes in the Admin Mode, the diskAshur will return to the Standby Mode.



12. Adding a new User PIN

You can add a new User PIN by doing the following:

1. Enter the Admin Mode (refer to page 9 for details).
2. Press and hold  + 1 until the LED indicator light flashes **BLUE** intermittently.
3. Enter a User PIN and press  (a minimum of 6 digits and a maximum of 16 digits). The LED indicator light will flash **GREEN** three times.
4. Re-enter the new User PIN and press . If the LED indicator light stays solid **GREEN** for two seconds and then solid **BLUE**, the User PIN was added successfully.





13. Deleting the User PINs

You can delete all User PINs by doing the following:

1. Enter the Admin Mode (refer to page 9 for details).
2. Press and hold 7 + 8 +  for five seconds until the LED indicator light flashes **BLUE** intermittently. After the LED indicator light will flash **GREEN** three times and then **BLUE** intermittently.
3. Press and hold 7 + 8 +  a second time for five seconds until the LED indicator light goes on solid **GREEN** for two seconds and then back to solid **BLUE**, this indicates that the User PINs were deleted successfully.

14. Changing the User PIN

You can change the User PIN by doing the following:




1. Enter User Mode (refer to page 8 for details).
2. Press and hold  + 1 until the LED indicator light flashes **RED**.
3. Enter your old PIN and press . The LED indicator light will turn **GREEN**, then change to flashing **BLUE**.
4. Enter the new PIN and press  (The PIN must be a minimum of 6 digits and a maximum of 16 digits). The LED indicator light will flash **GREEN** three times.
5. Immediately re-enter the new User PIN and press . The LED indicator light will stay solid **GREEN** indicating that the User PIN has been changed successfully.

15. Setting the Unattended Auto Lock Feature

To protect against unauthorized access if the drive is unlocked and unattended, the diskAshur can be set to automatically lock after a pre-set amount of time.

In its default state, the diskAshur Unattended Auto Lock feature is turned off. The Unattended Auto Lock can be set to activate after 5, 10 or 20 minutes.

To set the Unattended Auto Lock please use the following steps:

1. Enter the Admin mode by pressing and holding  + 0 for five seconds until the LED indicator light flashes **RED**. This indicates that you can enter the Admin PIN.
2. Enter the Admin PIN and press . The drive is in Admin Mode when the LED indicator light has changed to **BLUE**.
3. Once in Admin mode, press  + 6. The LED indicator light should start flashing **RED** and **BLUE** intermittently.
4. Press one of the numbers below that corresponds to amount of time you would like the drive to lock after no activity:

Auto Lock Timeout Table:

1 = 5 min
2 = 10 min
3 = 20 min
0 = OFF

The default is 0 (OFF)

5. After you have input the number, the LED indicator light should flash **GREEN** 3 times to indicate that you have successfully set the Unattended Auto Lock feature.

16. Brute Force Protection

What is a Brute Force Attack?

A brute force attack is a method of defeating a cryptographic scheme by systematically trying a large number of possibilities; for example, a large number of the possible keys in a key space in order to decrypt a message.

In most schemes, the theoretical possibility of a brute force attack is recognized, but it is set up in such a way that it would be computationally infeasible to carry out. Accordingly, one definition of “breaking” a cryptographic scheme is to find a method faster than a brute force attack.

How does the diskAshur protect against brute force attack?

1. With the drive locked and in the standby state the LED indicator light will be solid **RED**.
2. After six tries to enter the correct user or admin PIN the keypad will not respond and LED indicator light will turn off. The drive will need to be unplugged from the USB port and replugged. This will be repeated for each six unsuccessful attempts.
3. If the user unsuccessfully tries to unlock the drive on his 25th try the keypad will lock and the LED indicator light will begin blinking quickly. Even after unplugging and replugging in the unit, the drive will remain locked and the LED indicator light will continue to blink rapidly.
4. Here are the steps to allow the user to unlock the keypad for 50 more attempts to unlock the drive.
 - a. Unplug the device from the computer.
 - b. Push and hold the number five key and plug-in the drive.
 - c. The LED indicator light will be blinking, alternating **RED** and **GREEN** rapidly.
 - d. Enter the code **5278879**.
 - e. The keypad will unlock and will be in the standby state with the LED indicator light solid **RED**, this will allow only 50 more attempts.
 - f. After a total of 75 attempts the drive will remain locked with the LED indicator light flashing **RED** quickly. You must now go through the reset process and reformat the drive to be able to use the drive again (see page 15 - Completely resetting the diskAshur).





17. Setting a Self Destruct PIN

The diskAshur has the ability to set a PIN that will reset the encryption key if needed. By resetting the encryption key all data on the drive will be lost and cannot be recovered.




Note: After initiating the Self Destruct sequence, the PIN used to initiate the self destruct sequence will become the default Admin PIN. The drive will need to be initialized and reformatted. For directions see page 15.

To set a Self Destruct PIN please use the following steps:

1. Enter the Admin mode by pressing and holding  + 0 for five seconds until the LED indicator light flashes **RED**. This indicates that you can enter the Admin PIN.
2. Enter the Admin PIN and press . The drive is in Admin Mode when the LED indicator light has changed to **BLUE**.
3. Once in Admin mode, press  + 3. The LED indicator lights should start flashing **RED** and **BLUE** intermittently.
4. Input in the PIN that you would like to use as the Self Destruct PIN and press .



Note: The PIN must be a minimum of 6 digits in the length (16 max) and cannot match any Admin or User codes already used by the drive. In the future, a User or Admin code can not be set to the same number as used by the Self Destruct PIN.

5. The diskAshur will then check against known PINs to make sure that it is not already in use. If in use the LED indicator light will flash **RED** three times and the drive will go into Standby mode. If this happens please re-enter the Admin mode (step 1) and repeat the process with a new code.
6. If the Self Destruct PIN is accepted the LED indicator light flashes **GREEN** three times.
7. Immediately re-enter the new PIN and press . If the LED indicator light stays solid **GREEN** for two seconds and then goes to solid **BLUE**, the Self Destruct PIN was added successfully.
8. To delete the Self Destruct PIN, you will need to delete all of the User PINs. Please refer to the instructions on page 11 - Deleting User PINs.

18. Completely resetting the diskAshur

If you forget all the User PINs or Admin PINs, you can perform a complete reset to remove all the User PINs, and restore the Admin PIN to the default **123456**.



Attention: Completely resetting the diskAshur will reset the encryption key, in effect making all the data on the drive unrecoverable. You will need to partition and format the diskAshur with disk management applications. To perform a complete reset of the drive, do the following:

1. Press and hold the **"Cancel"** button while you attach the diskAshur to an available USB port on your computer. The LED indicator light will flash **BLUE** and **RED** alternately.


Note: If no activity is detected for 30 seconds during this step, the diskAshur will go into the Standby Mode.

2. Press and hold **"Cancel"** +  + **2** for 10 seconds until the LED indicator light flashes **RED** and **BLUE** intermittently, and then stops on a solid color. The LED indicator light will then turn solid **GREEN** for two seconds, followed by solid **RED**. You have successfully reset the diskAshur.

19. Initializing and formatting the diskAshur after a complete reset

A complete reset of the diskAshur will erase all information and partition settings. You will need to initialize and format the diskAshur.


To initialize your diskAshur, do the following:

1. After a complete reset, attach the diskAshur to the computer.
2. Wait 5 seconds for the computer to recognize the device.
3. Enter the default User PIN **123456** and press  to enter the User Mode.
4. Right-click **My Computer** or **Computer**, and then click **Manage**.


- In the Computer Management window, click **Disk Management**. In the Disk Management window, the diskAshur is recognized as an unknown device that is uninitialized and unallocated.




Note: If the Initialize Disk Wizard window opens, click **Cancel**.

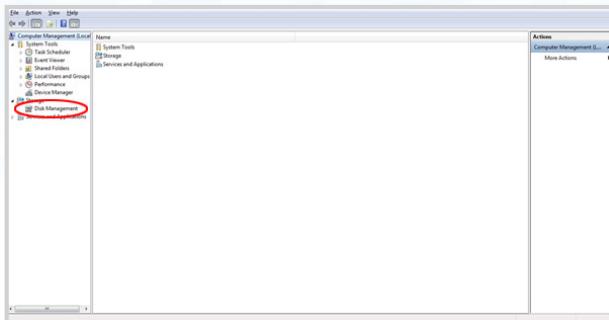


- Right-click Unknown Disk, and then select Initialize Disk.

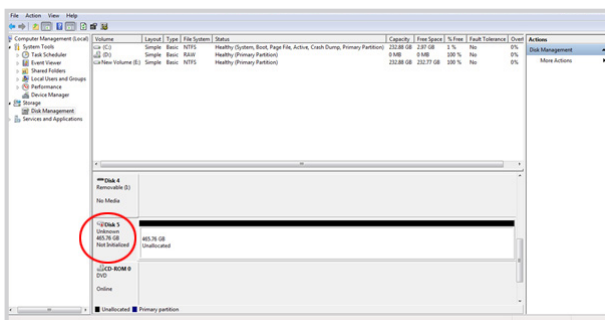

- In the Initialize Disk window, click **OK**.

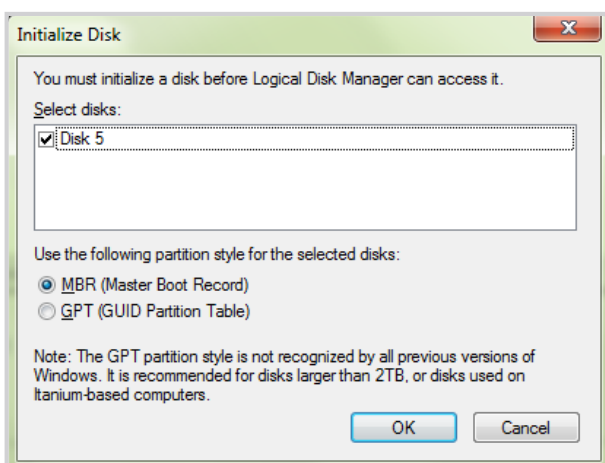

- Right-click in the blank area under the Unallocated section, and then select New Simple Volume. The Welcome to the New Simple Volume Wizard window opens.

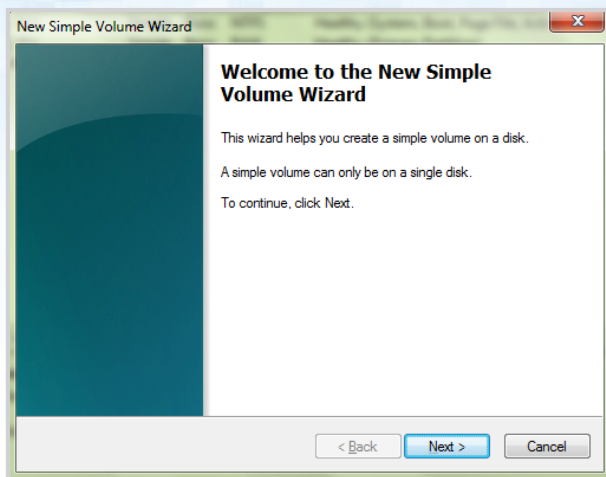

9. Click **Next**.
10. If you need only one partition, accept the default partition size and click **Next**.
11. Assign a drive letter or path and click **Next**.
12. Create a volume label, select Perform a quick format, and then click **Next**.
13. Click **Finish**.
14. Wait until the format process is complete. The diskAshur will be recognized and it is available for use.

20. Hibernating, Suspending, or Logging off from the Operating System

Be sure to save and close all the files on your diskAshur before hibernating, suspending, or logging off from the Windows operating system.

It is recommended that you log off the diskAshur manually before hibernating, suspending, or logging off from your system.

To log off the diskAshur, double-click Safely Remove Hardware on the Windows desktop and remove the diskAshur from your computer.



Attention: To ensure the data integrity of your diskAshur, be sure to lock or log off your diskAshur if you are:

- away from your computer
- using the switching user function by sharing a computer with others

21. Troubleshooting

This section contains troubleshooting information for the diskAshur. If you encounter any of the following problems when using the diskAshur, refer to the corresponding answers.

Q: How do I use the diskAshur the first time?

A: You can use it in one of the following ways:

- Enter the Admin Mode with **123456** (default administrator PIN), and then you are able to change the Admin PIN or create a User PIN.
- Directly enter the Secure User Mode with **123456** (default Admin PIN) to use the diskAshur.

Q: I enter the drive with the default PIN but am not able to change the code. Why?

A: You are entering the drive using the Admin PIN. This code can only be changed from the Admin mode.

Q: What can I do if I forget the User PIN?

A: Use your Admin PIN to enter Admin Mode, and then create another User PIN in Admin Mode.

Q: What can I do if I forget the Admin PIN?

A: There is no other way to retrieve the Admin PIN except a complete reset of the diskAshur. After a complete reset, all data will be lost and you will need to initialize, allocate and format the diskAshur manually. Then you will be able to use the default Admin PIN **123456**.

Q: Why did the operating system not recognize the diskAshur after I completely reset the computer and after I enter the User Mode?

A: You need to initialize, allocate and format the diskAshur manually. For more information, refer to Initializing and formatting the Hard Drive after a complete reset in this manual.

Q: How do I use the diskAshur without a PIN?

A: As a full disk encryption product, the diskAshur can never be used without a PIN.

Q: What encryption algorithm is used in this product?

A: Depending on your model the diskAshur uses either AES 128-bit or 256-bit algorithm.

Q: Why could I not initialize, partition or format the diskAshur?

A: Ensure that you have administrator privileges. You can use only the administrator account to initialize, partition or format the diskAshur in the Admin Mode.

Q: Do I require “Admin Rights” for the diskAshur to work?

A: No, since the diskAshur does not require any software to be installed and the encryption/decryption is performed in Hardware on the drive itself, “Admin Rights” are not required.

Q: I’m getting a continuously flashing red light what is wrong?

A: You have entered an incorrect PIN too many times and have triggered the brute force attack protection; you can reset this counter by referring to the `Brute Force Protection` section of this manual. When trying again ensure you are using the correct PIN as too many lockouts are irreversible.

Q: My diskAshur locks for no reason when connected to my computer whilst I’m using it, what is causing this?

A: The issue you are having is being caused by power saving settings on your PC or Laptop so please see below and make the appropriate changes to your computer and this will stop the diskAshur from locking as when your computer is power saving it switches off data to the USB ports and our products see that as `Disconnect` and are designed to lock when this is detected.

Microsoft Windows


Doing the following will prevent Windows from switching off the diskAshur, go to ‘**Control Panel**’ & ‘**Power Options**’, the easier option is to disable power saving which means stopping the computer from `Sleeping` see below;



In addition go into `Advanced Settings` in `Power Option` to disable the following:

- Ensure the computer is set to sleep: Never (as above)
- Turn off hard disk after: 999999 Minutes
- USB selective suspend setting: Disabled


This will keep the diskAshur connected to the computer continuously on.

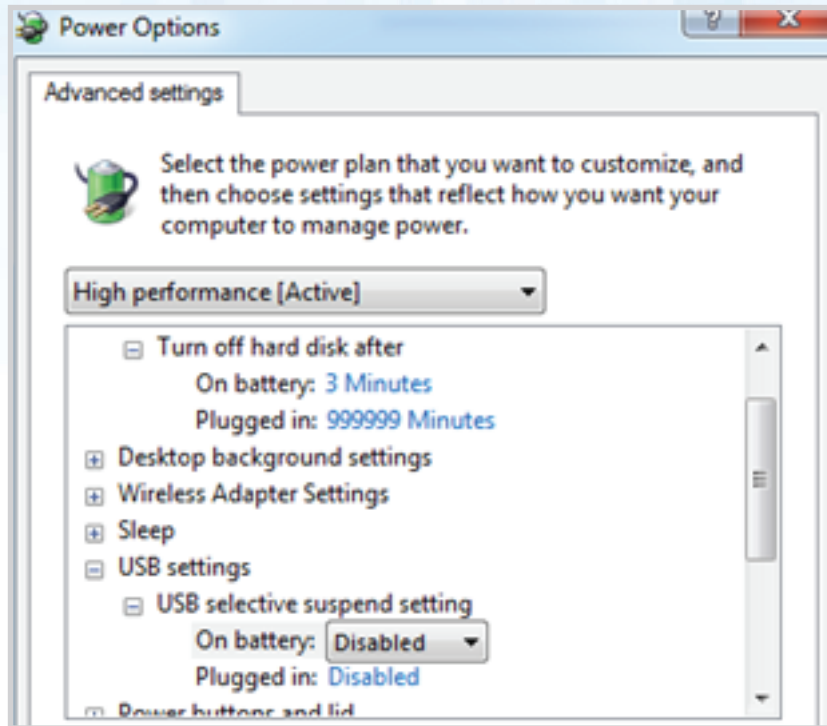

Apple Mac

The diskAshur keeps locking after 5-10 minutes on the Macs – This will be due the Mac's power saving as there is a setting to switch off hard drives that are idle after a fix period of time see below;

The settings in [Energy Saver preferences](#) affect what happens when your Mac is left unattended for a period of time that you specify. Disable `Put the hard disk(s) to sleep when possible` to prevent the diskAshur going to sleep and so not locking. You will also need to stop the computer from sleeping to prevent the diskAshur from locking.

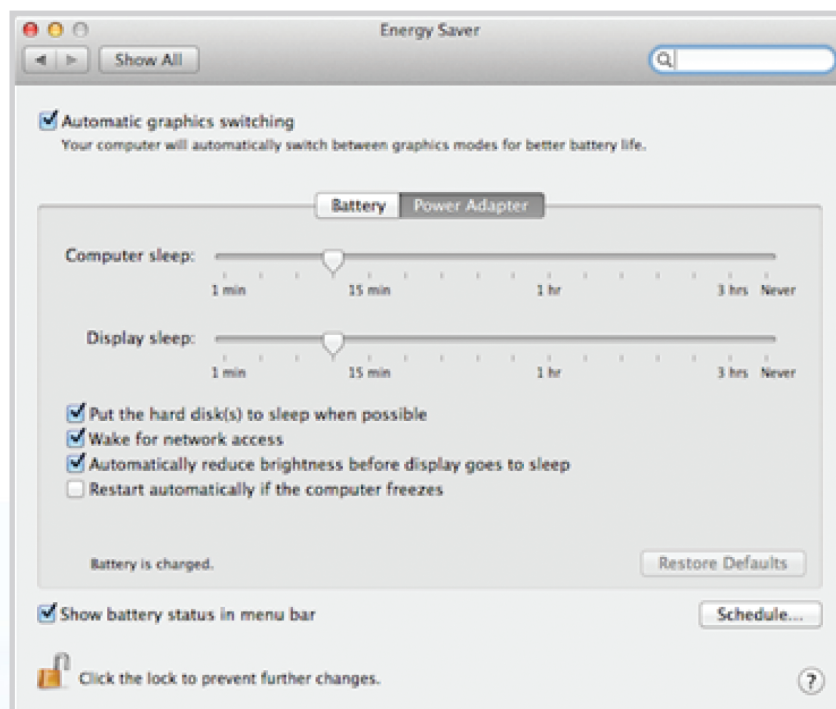

Note For Windows 8.1 users; You will need to install a Windows update (KB2919355) as well as follow the steps on pages 18 &19. Please go to this link and choose Method 2; <http://support.microsoft.com/kb/2919355>. Once the download option appears select KB2919355 and then download and install.

Q: My diskAshur locks when my computer sleeps/hibernates how can I stop this?

A: The only way to prevent this is by changing the power settings (Windows computers) of the computer so that it only switches of the monitor on hibernation/sleep and keeps power to hard drives and USB. On Apple MAC computers going to the power settings in `System Preferences` and clicking the do not suspend USB will keep the drive alive even if the MAC goes into full hibernation.

Q: The diskAshur will not power on when connected to my computer?

A: This only happens when the computer the diskAshur is connected to cannot provide enough power from the USB port to power the drive. This issue only appears on much older computers and/or imbedded systems like USB enabled medical equipment. It can be resolved by either trying all the USB ports on the computer or system as some ports can have less power than others or failing that use the USB Y-Power cable supplied with the diskAshur to ensure the correct power.

Q: I want to use my diskAshur with different Operating Systems how can that be done?

A: To make the diskAshur universally compatible with all the most common Operating Systems and embedded systems like USB enabled medical equipment, requires the drive to be formatted using the FAT file system. This is done by using `Disk Management` in Windows, `Disk Utility` on MAC OS/x or MKFS in Linux.

Q: How many unique User ID's can I create?

A: The Administrator feature allows enrollment of up to five (5) unique User ID's and one (1) Administrator. If a user forgets their PIN, the diskAshur can be unlocked using the Admin PIN.

22. Technical Support

iStorage provides the following helpful resources for you:

iStorage's Website

<http://www.istorage-uk.com>

E-mail correspondence

support@istorage-uk.com

Telephone support with our Technical Support Department on **+44 (0) 20 8991-6260**.

iStorage's Technical Support Specialists are available from 9:00 a.m. to 5:30 p.m.

GMT - Monday through Friday.

23. Warranty and RMA information

Two Year Warranty:

iStorage offers a 2-year warranty on the iStorage diskAshur against defects in materials and workmanship under normal use. The warranty period is effective from the date of purchase either directly from iStorage or an authorised reseller.

Disclaimer and terms of warranty:

THE WARRANTY BECOMES EFFECTIVE ON THE DATE OF PURCHASE AND MUST BE VERIFIED WITH YOUR SALES RECEIPT OR INVOICE DISPLAYING THE DATE OF PRODUCT PURCHASE.

ISTORAGE WILL, AT NO ADDITIONAL CHARGE, REPAIR OR REPLACE DEFECTIVE PARTS WITH NEW PARTS OR SERVICEABLE USED PARTS THAT ARE EQUIVALENT TO NEW IN PERFORMANCE. ALL EXCHANGED PARTS AND PRODUCTS REPLACED UNDER THIS WARRANTY WILL BECOME THE PROPERTY OF ISTORAGE.

THIS WARRANTY DOES NOT EXTEND TO ANY PRODUCT NOT PURCHASED DIRECTLY FROM ISTORAGE OR AN AUTHORIZED RESELLER OR TO ANY PRODUCT THAT HAS BEEN DAMAGED OR RENDERED DEFECTIVE: 1. AS A RESULT OF ACCIDENT, MISUSE, NEGLIGENCE, ABUSE OR FAILURE AND/OR INABILITY TO FOLLOW THE WRITTEN INSTRUCTIONS PROVIDED IN THIS INSTRUCTION GUIDE; 2. BY THE USE OF PARTS NOT MANUFACTURED OR SOLD BY ISTORAGE; 3. BY MODIFICATION OF THE PRODUCT; OR 4. AS A RESULT OF SERVICE, ALTERATION OR REPAIR BY ANYONE OTHER THAN ISTORAGE AND SHALL BE VOID. THIS WARRANTY DOES NOT COVER NORMAL WEAR AND TEAR.

NO OTHER WARRANTY, EITHER EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, HAS BEEN OR WILL BE MADE BY OR ON BEHALF OF ISTORAGE OR BY OPERATION OF LAW WITH RESPECT TO THE PRODUCT OR ITS INSTALLATION, USE, OPERATION, REPLACEMENT OR REPAIR. ISTORAGE SHALL NOT BE LIABLE BY VIRTUE OF THIS WARRANTY, OR OTHERWISE, FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGE INCLUDING ANY LOSS OF DATA RESULTING FROM THE USE OR OPERATION OF THE PRODUCT, WHETHER OR NOT ISTORAGE WAS APPRISED OF THE POSSIBILITY OF SUCH DAMAGES.



© iStorage, 2012. All rights reserved.
iStorage Limited, iStorage House, 13 Alperton Lane
Perivale, Middlesex. UB6 8DH, England
Tel: +44 (0) 20 8991 6260 | Fax: +44 (0) 20 8991 6277
e-mail: info@istorage-uk.com | web: www.istorage-uk.com